


14" Fan Mount Installation

Kit supplied with Fan Mount

1x		CORSICA ShadeScapes Fan Mounting Plate, Anodized Aluminum, w/ foam weather strip applied to back - 3/16" x 6 1/4" x 23 3/4"	8x		Truss Head Sheet Metal Screw - #8 x 3/4"
		ABRI 3/16" x 4 7/8" x 23 3/4"	3x		Bolt, Semi-Gloss Black - 5/16" x 1" (18)
1x		Extended Mounting Bracket, Black Powder Coated Steel	3x		Flat Washer, Black luster - 5/16"
1x		Anzeser Black Cable Grommet, pre-mounted - 1-3/4"	4x		Flat Washer, Stainless Steel - 5/16"
			3x		Lock Nut, Stainless Steel - 5/16" (18)


Tools Required

6' Step Ladder	3/8" Socket Set or Crescent Wrench or 1/2" Box-end Wrench	1/8" Drill Bit
Spring Clamp	Variable Speed Cordless Drill	Phillips #2 Tip Bit


Overview

Installation of the 14" Fan on a Cuscini Cabana is fairly straightforward. The second one will likely go faster than the first. The installer should be comfortable in a finish work environment and have some finesse in tool use. The anodized surface is pretty robust, but care should be taken to avoid scratches during installation. Instead of mounting the mounting bracket that comes with the fan, you will be using the extended mounting bracket that comes with the kit.

Work with your electrician and an electrical inspection will need to be coordinated. The aluminum plate can be mounted on the cabana corner post once the electrical rough-in is done. Final installation of the fan itself can be done after electric finish & inspection.

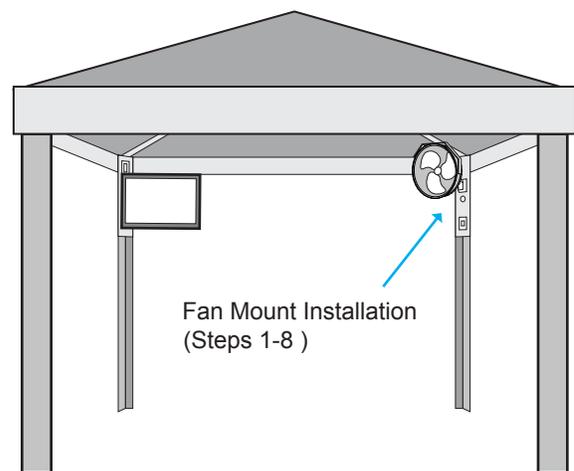

1

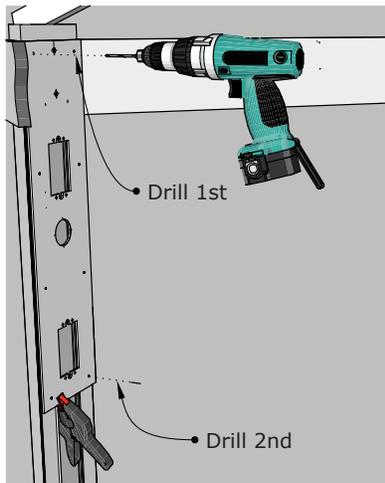

Pre-Drill for Mounting Screws


The corner post will need to be accurately pre-drilled for the eight #8 trusshead, sheet metal mounting screws and it will be easiest to do this before other steps.

Align the ShadeScapes plate even with the top of the aluminum corner post and centered. It will be slightly proud of the edges of the post corners. Clamp bottom of plate with a spring clamp; check alignment at the top and pre-drill one of the top holes using a 1/8" bit.

Because alignment is critical and plate can shift position during drilling, we suggest pre-drilling and installing screws on the diagonal corners of the plate to secure it in position before pre-drilling the six remaining holes.

That done, remove the two screws and proceed to attaching the fan bracket.

2

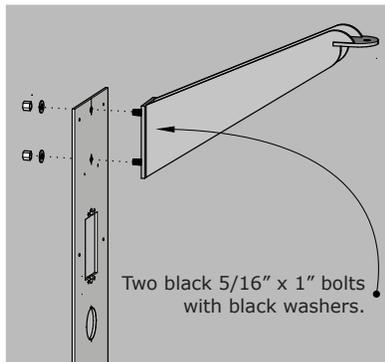


Attach Bracket

Attach the fan mounting bracket to the aluminum plate with two black 5/16" x 1" bolts and black washers with stainless steel washers and locking nut on the back side. Tighten appropriately.

If electrician is not available to proceed, the assembly will need to be safely stored.

Note: this step can be done after electrical rough-in. Make sure circuit is off.

3

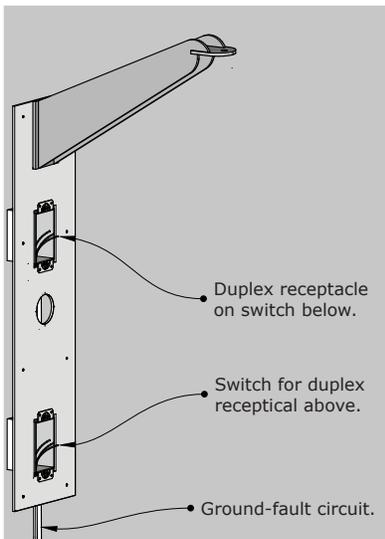

Electric Rough-in:

Electric boxes must be 2" or less in depth to fit into the cabana corner post.

The duplex outlet at top is controlled by the switch below.

Circuit is ground-fault protected.

4


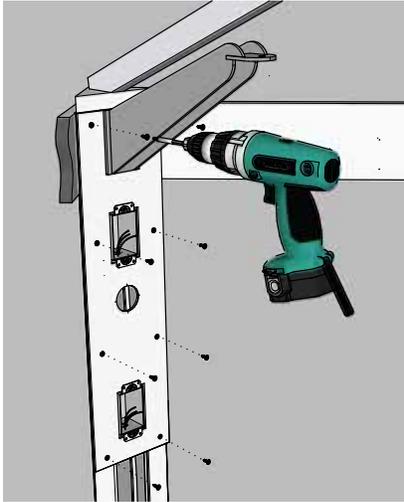


Plate Assembly Mounting

Mount the plate assembly to the corner post with the eight #8 truss-head sheet metal screws. Take it slow starting the screws into the corner post. Snug down and take care not to over tighten and strip threads.


5

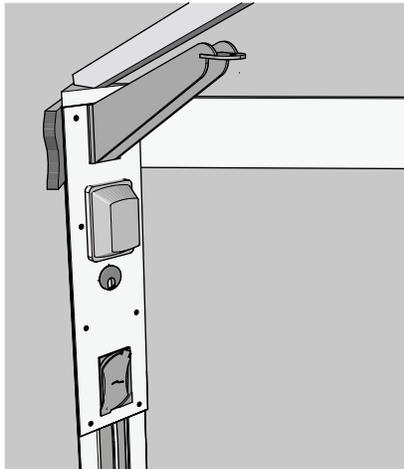

Install Covers

Install in-use cover over duplex outlet and water-proof switch cover over switch.

6

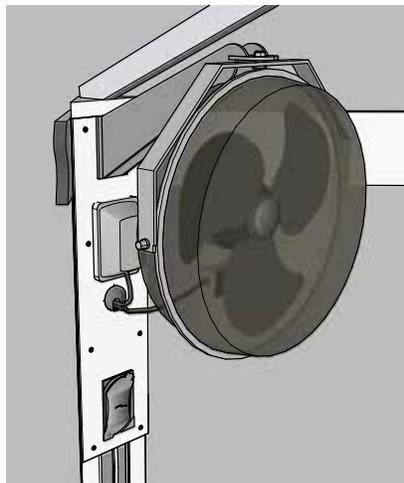

Install Fan


Install the 14" Fan onto the support bracket tab with the 1" x 5/16" stainless steel bolt, three washers — the bottom one is black, the middle and top ones are stainless steel — and the locknut. Tighten until fan angle can be adjusted by hand, but not drift. Do not lock down tight.

Adjust fan to desired downward angle and tighten nuts on the fan yoke till they hold the fan into position, but can still be adjusted by hand.

Pass loop of excess cord into the corner post cavity through the 1-3/4" black cable grommet. Leave enough slack to adjust fan position.

Set rotation speed as desired for size of cabana.


7

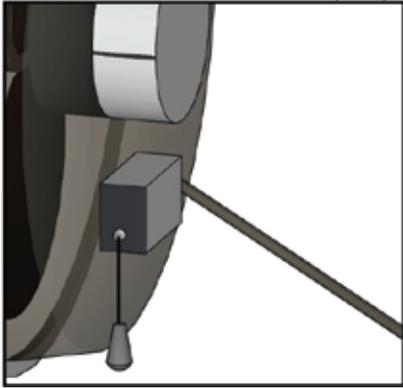

Shorten Speed Adjust Cord:

Shorten speed adjust pull cord and reattach fob. This will allow speed to be adjusted while keeping it out of the reach of small hands.

8

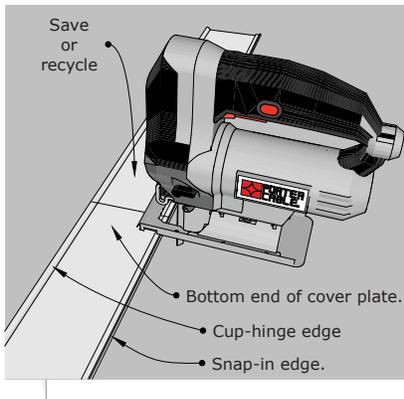

Cut Snap-In Cover Plate (if required):

Your Cuscini cabana can ship with the snap-in cover plates already cut to fit below the 23 3/4" ShadeScapes mounting plates.

If cutting on site is preferred, measure the length from the bottom of corner post to the bottom of the installed ShadeScapes TV/Fan Plate. The Cuscini corner post cover plate needs to be cut to this length. It would be cleanest to cut the bottom of the plate and leave factory edge for the top. Orient the cover plate with the "cup hinge" on the appropriate side, cut and install.

The Cuscini cabana will come with an extra 23 3/4" snap-in cover plate that can be used as temporary filler if waiting on TV or Fan hardware.

FAN KIT ALTERNATIVE:

Fan Kits may also be specified in White. Includes white fan, white cable grommet and stainless bolt & washers.

This Fan Mount is an accessory designed and manufactured by ShadeScapes Americas for use on Cuscini cabanas only.