


Kit supplied with TV Mount

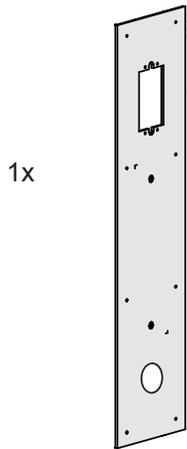

1x

CORSICA

ShadeScapes TV Mounting Plate,
Anodized Aluminum, w/ foam weather strip
applied to back - 3/16" x 6 1/4" x 23 3/4"

ABRI

3/16" x 4 7/8" x 23 3/4"

1x



Anzeser Black Cable Grommet, pre-mounted -
1-1/2"

8x



Truss Head Sheet Metal Screw - #8 x 3/4"

2x



Bolt, Semi-Gloss Black - 5/16" x 1" (18)

4x



Flat Washer, Black Luster - 5/16"

2x



Lock Nut - 5/16"-18

NOTE: Junction Box and Waterproof In-Use
Cover not included.

Tools Required

6' Step Ladder

3/8" Socket Set or Crescent Wrench or 1/2" Box-end Wrench

1/8" Drill Bit

Spring Clamp


Variable Speed Cordless Drill

Philips #2 Tip Bit


Overview

Electrical and TV cable service needs to be established prior to the TV mount plate installation. Once complete, the ShadeScapes TV mount plate can be prepped and attached to the corner post, and the TV mounted. Care needs to be taken to avoid scratching the anodized surface of the corner post during installation.

The Echo-Gear TV mount includes detailed instructions. Instead of mounting the bracket to a wall stud with lag bolts, it will be mounted to the ShadeScapes TV plate with two 5/16" black finished bolts.

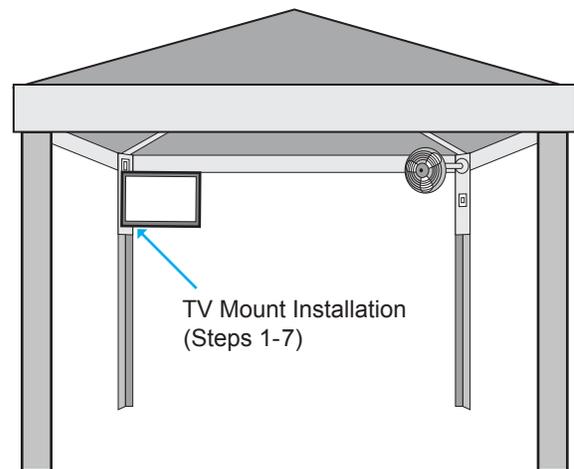

1

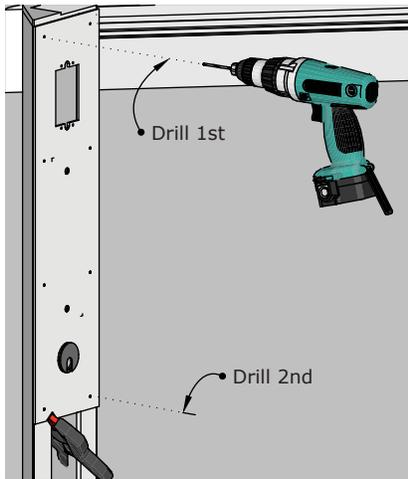

Pre-Drill for Mounting Screws


The corner post will need to be pre-drilled for the eight #8 truss-head, sheet metal mounting screws and it will be easiest to do this before other steps.

1) Align the ShadeScapes plate even with the top of the corner post and centered. It will be slightly proud of the edges of the post corners.

2) Clamp bottom of plate with a spring clamp; check alignment at the top and pre-drill one of the top holes using a 1/8" bit. Because alignment is critical and plate can shift position during drilling, we suggest pre-drilling and installing screws on the diagonal corners of the plate to secure it in position before predrilling the six remaining holes.

3) With pre-drilling completed, remove the two temporary screws and the face-plate is free to attach the Echo-Gear bracket.

2

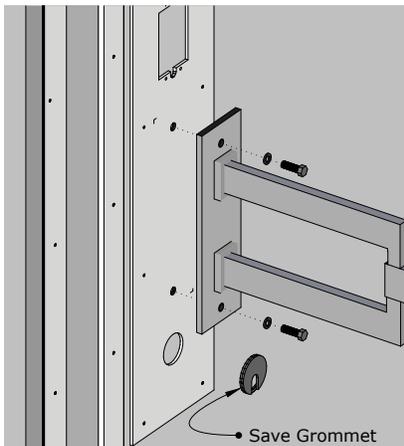


Attach EchoGear wall bracket

This can be done before or after necessary electrical work. Using the two 5/16" black bolts, washers and nuts, attach the EchoGear wall bracket securely to the ShadeScapes plate.

Please remove the black cable grommet that comes with the ShadeScapes plate parts and put it into the EchoGear box with the remaining hardware. This will be needed later by the TV installer.


3

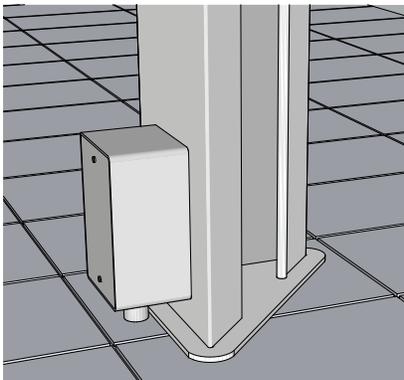

Electrical Work

The electrical system, particularly with multiple cabanas, will require early site planning to ensure that the process goes smoothly. A ground-fault protected circuit will need to be available at each cabana corner post on which a TV is to be mounted. While it is possible that wiring could be fed directly through holes in the base plate of the corner post, we recommend installing a ground level junction box (not included).

4

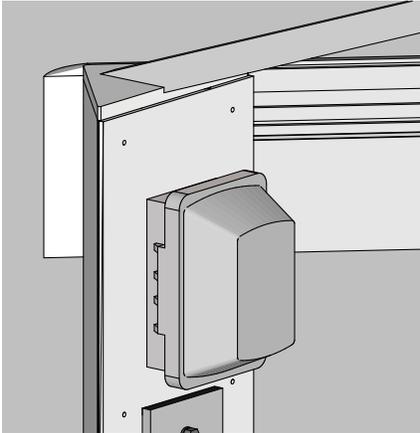

In-Use Cover

The duplex outlet for the TV will require a waterproof in-use cover. These covers are available in grey plastic and can be painted if needed (not included).


5



Attach Plate to Corner Post

Taking care not to over-tighten the screws into the aluminum, attach the plate to the corner post with the eight stainless steel sheet-metal screws.

6

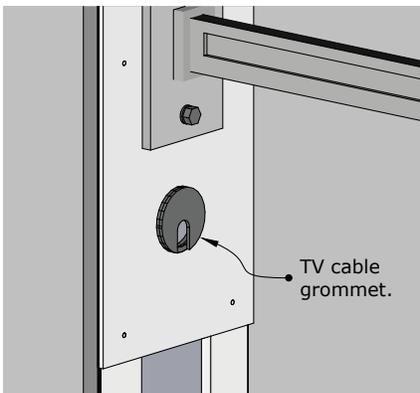


TV Cable System

After the plate is attached to corner post, the TV with cable can be installed.

Connection to the cable system will need to be available at the base of each cabana corner post where a TV is to be mounted. The system installer will need to bring the cable lead into the corner post and up through the cable grommet to the TV. The EchoGear wall mount comes with a six-foot HDMI cable.

7

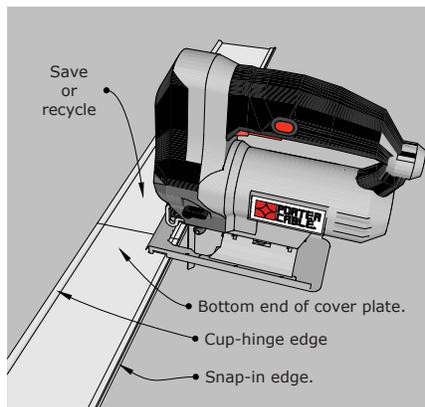

Cut Snap-In Cover Plate (if required)

Your Cuscini cabana can ship with the snap-in cover plates already cut to fit below the 23 3/4" ShadeScapes mounting plates.

If cutting on site is preferred, measure the length from the bottom of corner post to the bottom of the installed ShadeScapes TV Plate. The Cuscini corner post cover plate needs to be cut to this length. Cut the bottom of the plate and leave factory edge for the top. Orient the cover plate with the "cup hinge" on the appropriate side, cut and install.

The Cuscini cabana will come with an extra 23 3/4" snap-in cover plate that can be used as temporary filler if waiting on TV hardware.

This TV Mount is an accessory designed and manufactured by ShadeScapes Americas for use on Cuscini cabanas only.