

# SHADESCAPES


A M E R I C A S

## Concrete Mount Kit for Sclaro Astro and Galileo


*Please thoroughly read this installation manual before installing the concrete mount kit system and before operating the Sclaro Astro or Galileo umbrella. The warranty does not cover damage caused by incorrect installation, wind, or wrongful use of the product.*

### COMPONENTS LIST

1. Sclaro Base Plate (Packed in the umbrella box from Italy)

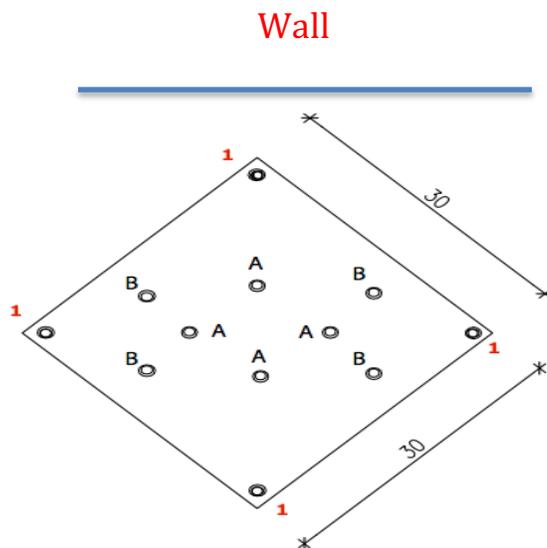

2. Concrete Bolts, Allen Wrench, Drill Bit (Shipped separately from ShadeScapes US warehouse)

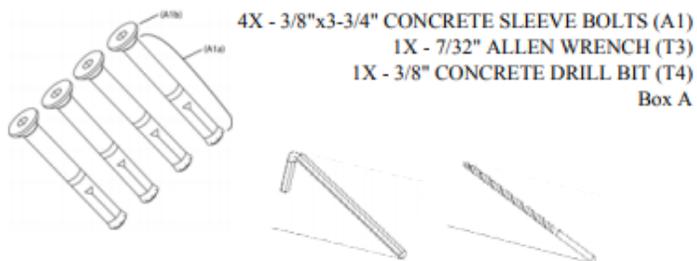

3. Spigot Bolts (Shipped with the Sclaro umbrella and found at the bottom of the box in a bag with the Owner's Manual)
4. TOOLS REQUIRED: Standard Electric Drill, Aerosol Compressed Air or Shop Vacuum, Carpenter's Level, Hammer, Pencil

## MOUNTING INSTRUCTIONS

1. Find a level area to install the baseplate.
2. The concrete bolts require a minimum concrete depth of 4" ideally at 3000PSI or higher.
3. Orient the baseplate in diamond position with whatever you are aligning your umbrella with.
4. Using the diamond-positioned base plate as a template mark the (4) corner hole locations on the concrete.
5. Drill (4) vertical holes using the drill bit to a depth of 3 ¾".
6. Clear the debris from the holes using compressed air.
7. Gently hammer the concrete bolts into the concrete leaving them flush with the surface.
8. Once flush, use the 7/32" Allen wrench to remove the four flat head screws from their sleeves.
9. The top of the bolt sleeve should be flush with the concrete.
10. Align the countersunk holes in the base plate with the four sleeves.
11. Use the 7/32" Allen wrench to insert the four flat head screws into the four sleeves. Make sure to tighten.

**Now you are ready to install the spigot onto the base plate using the bolts provided in the umbrella box along with your Owner's Manual for installing the umbrella onto the Spigot.**

**For Galaxia Astro, the Spigot will be bolted to the A holes in the above plate diagram.**

**For the Galileo, the Spigot will be bolted to the B holes in the above plate diagram.**

**When using the Concrete Mount Kit for the Galaxia Astro, an additional (4) bolts will be provided to be inserted into the (4) B holes.**

**If you have any questions at all, please contact  
[support@shadescaresusa.com](mailto:support@shadescaresusa.com)**

July 2020